

FIG. 1

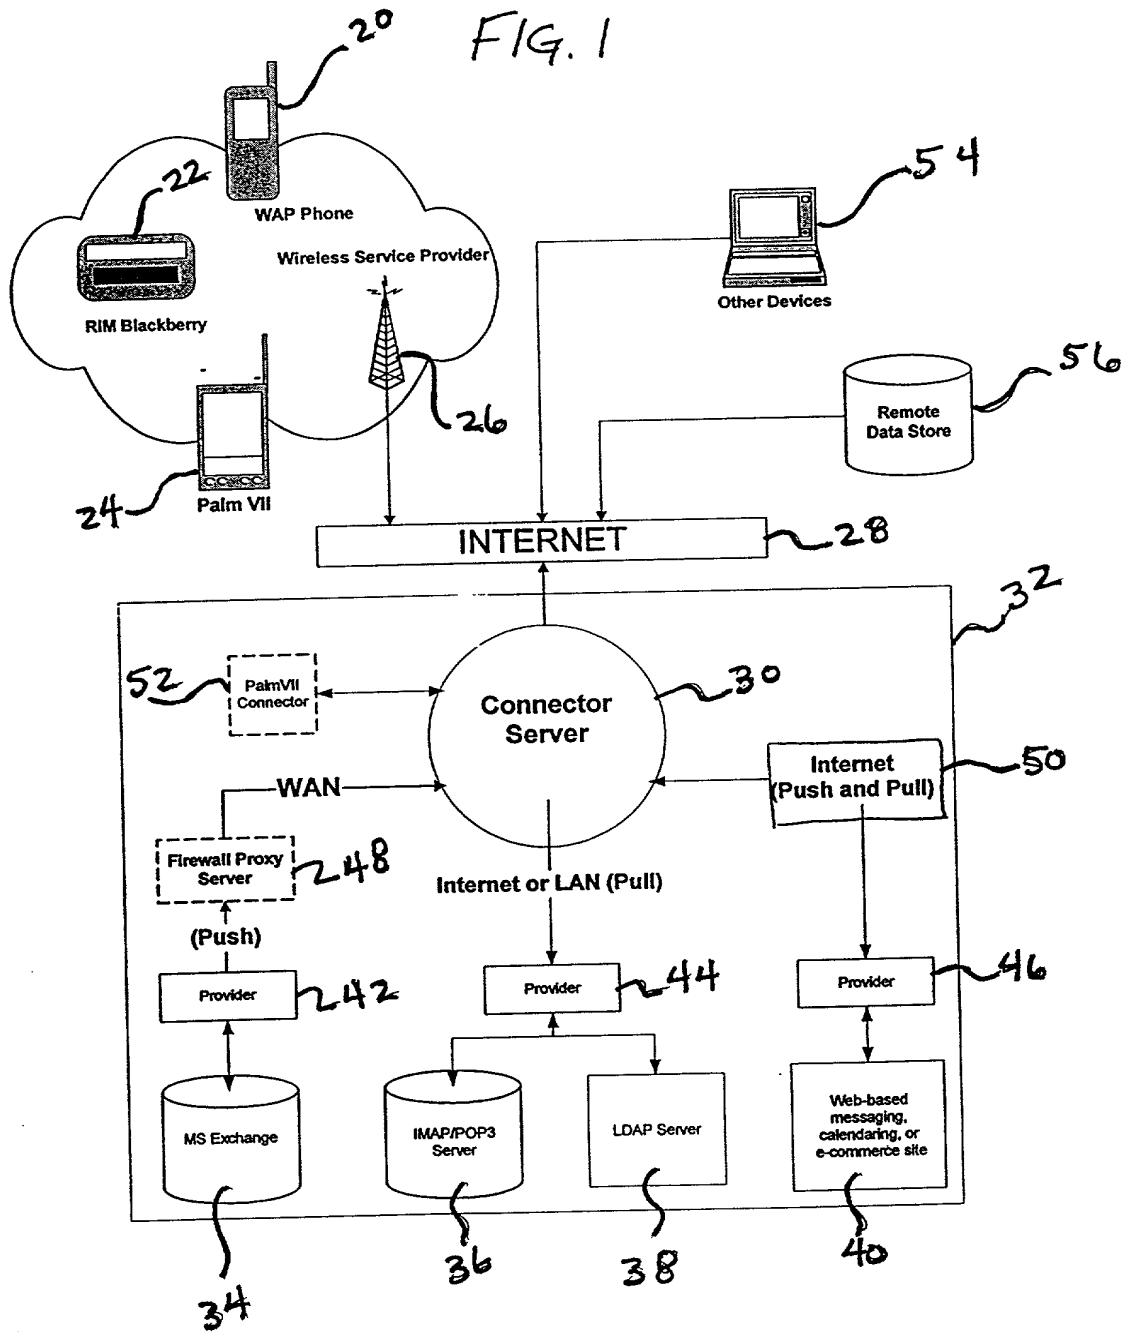
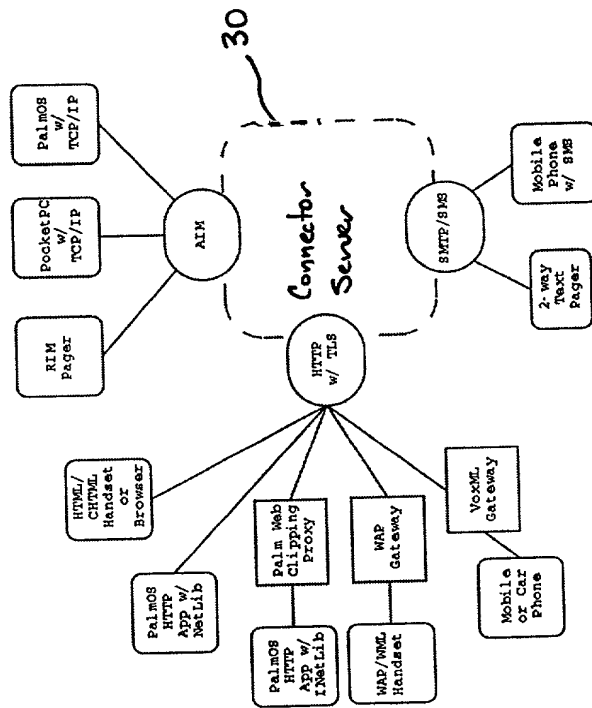
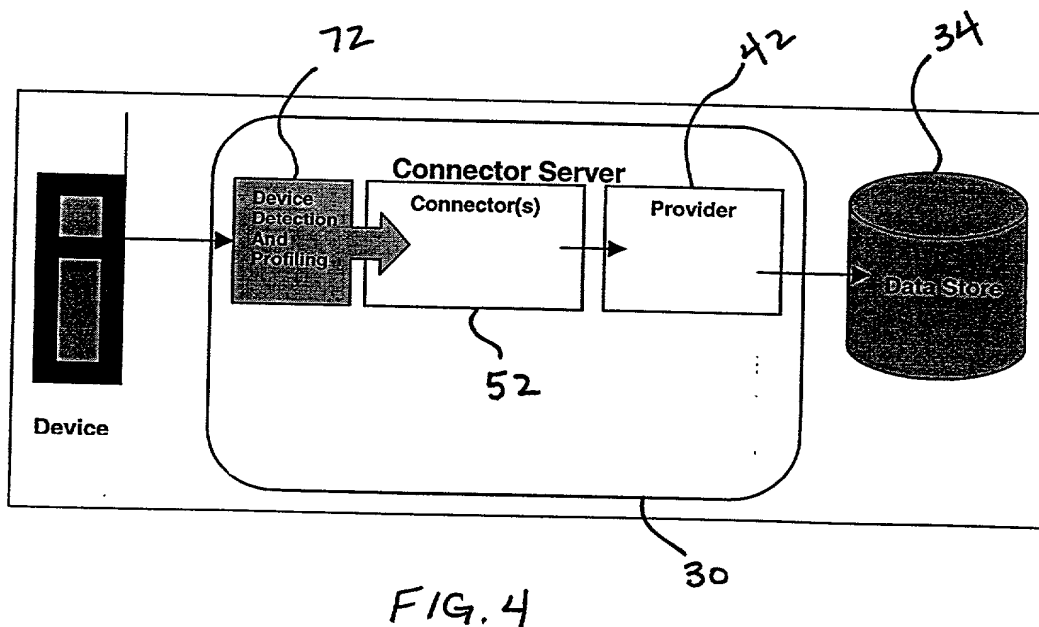
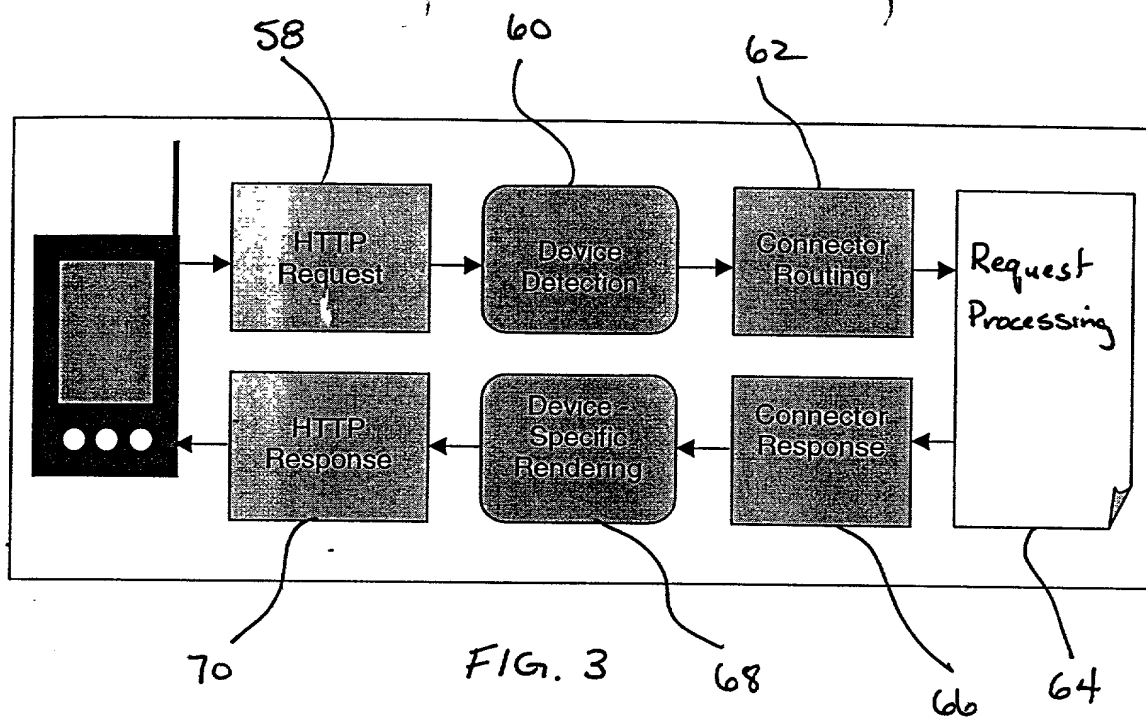


FIG. 2





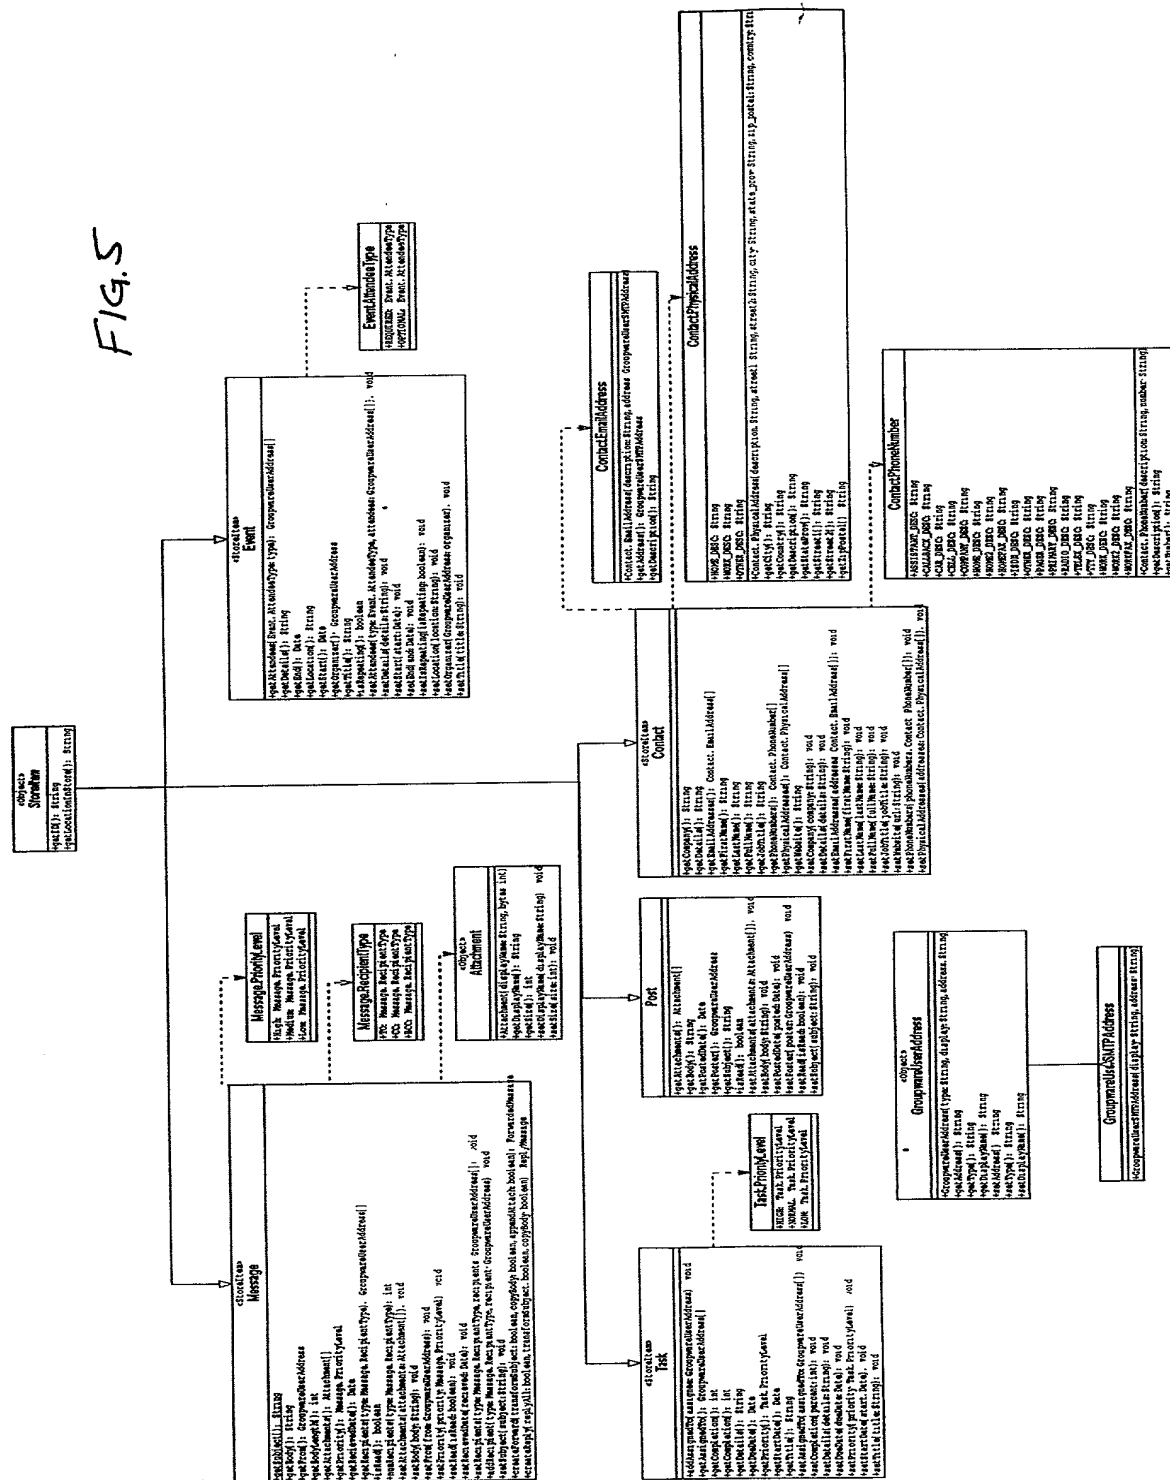


FIG. 6

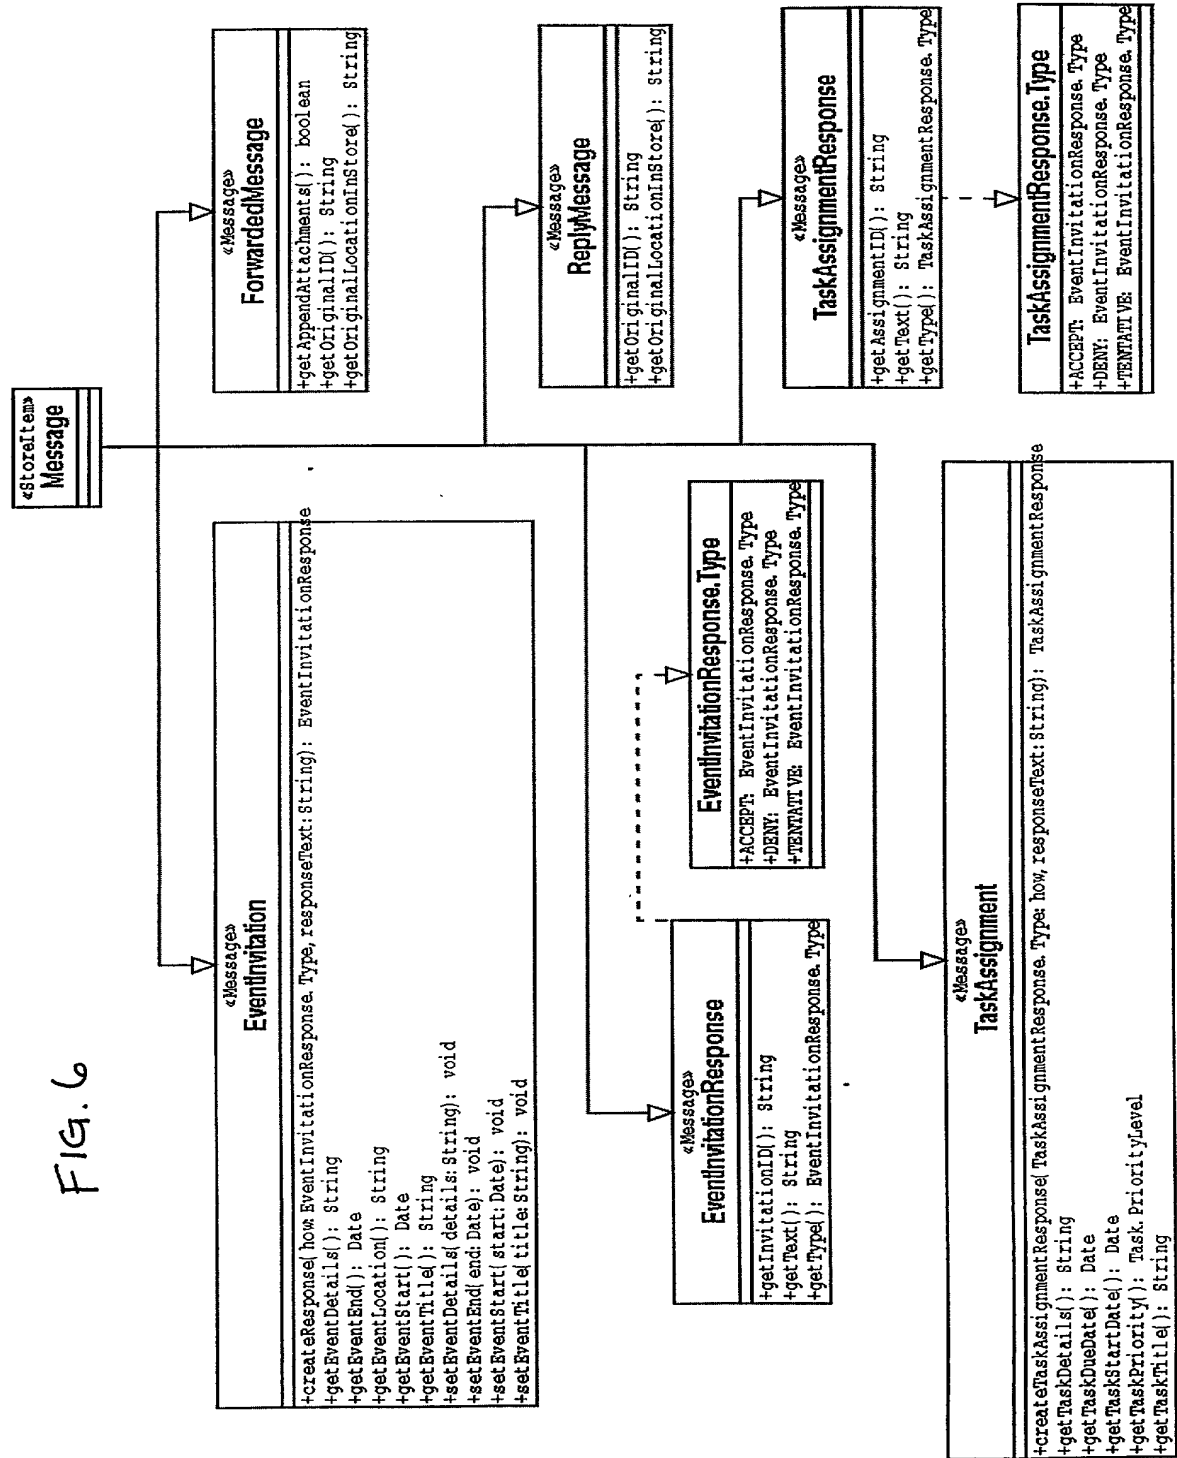


FIG. 7

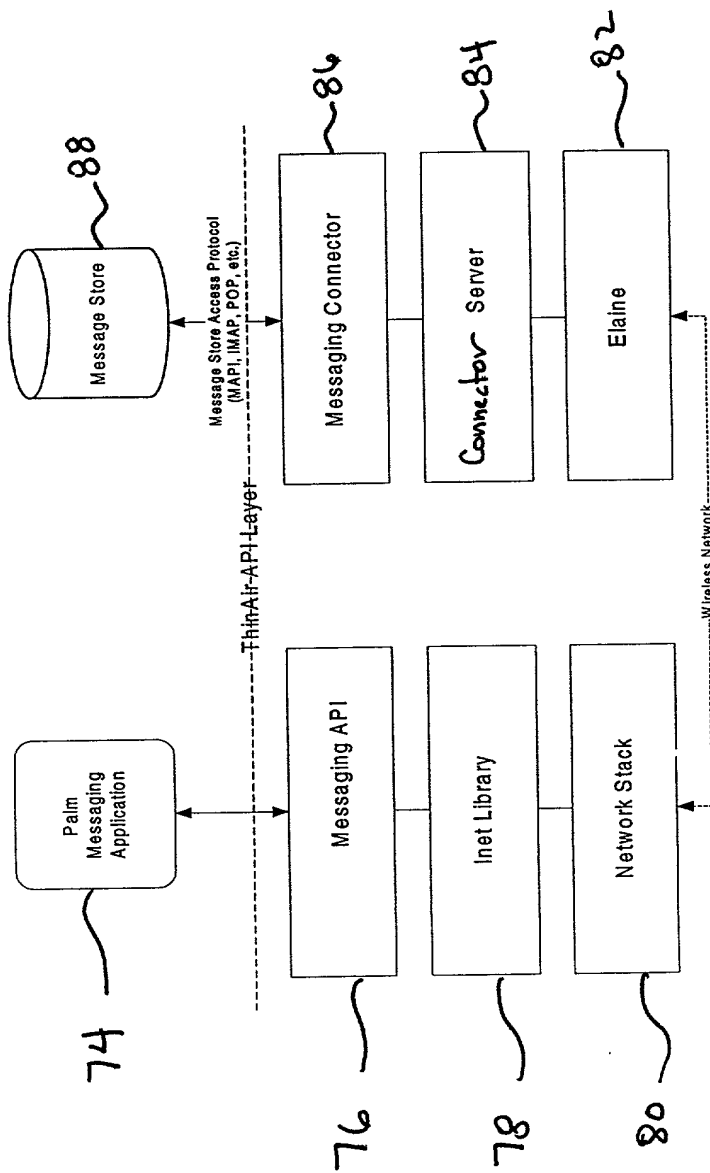


FIG. 8

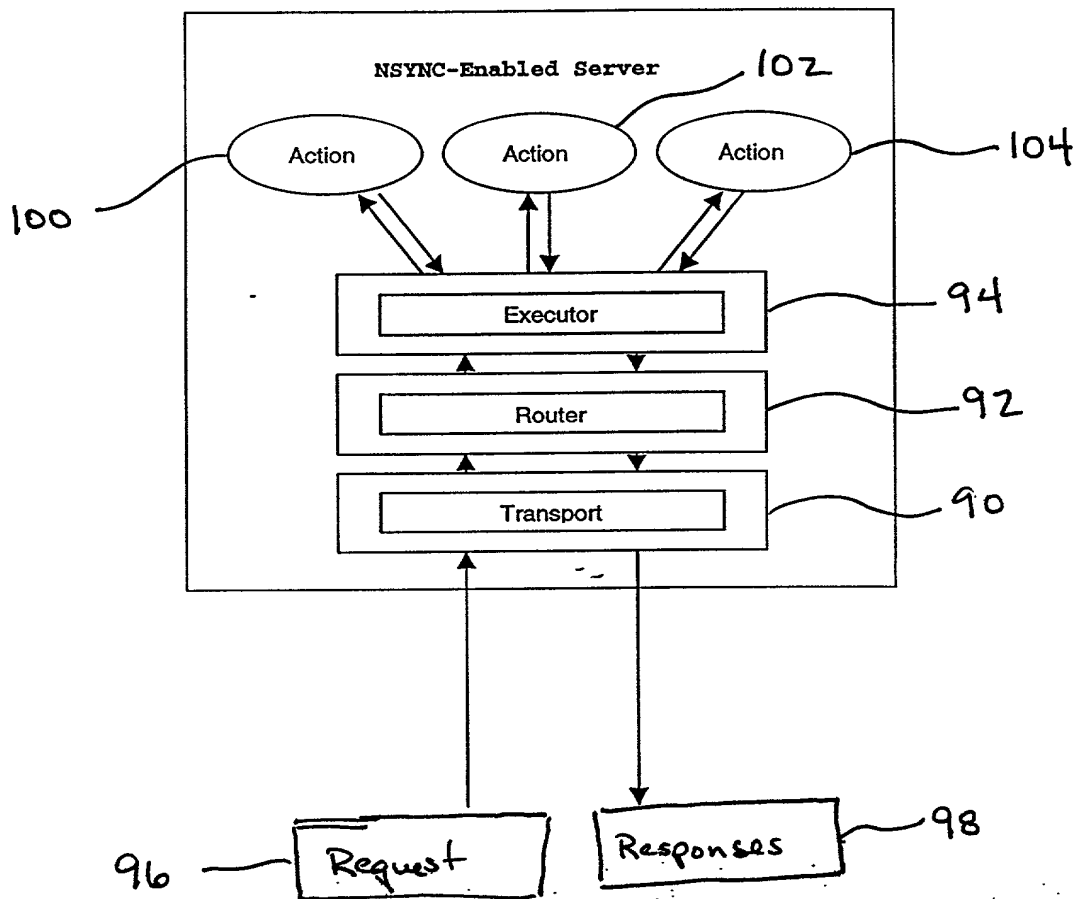


FIG. 8

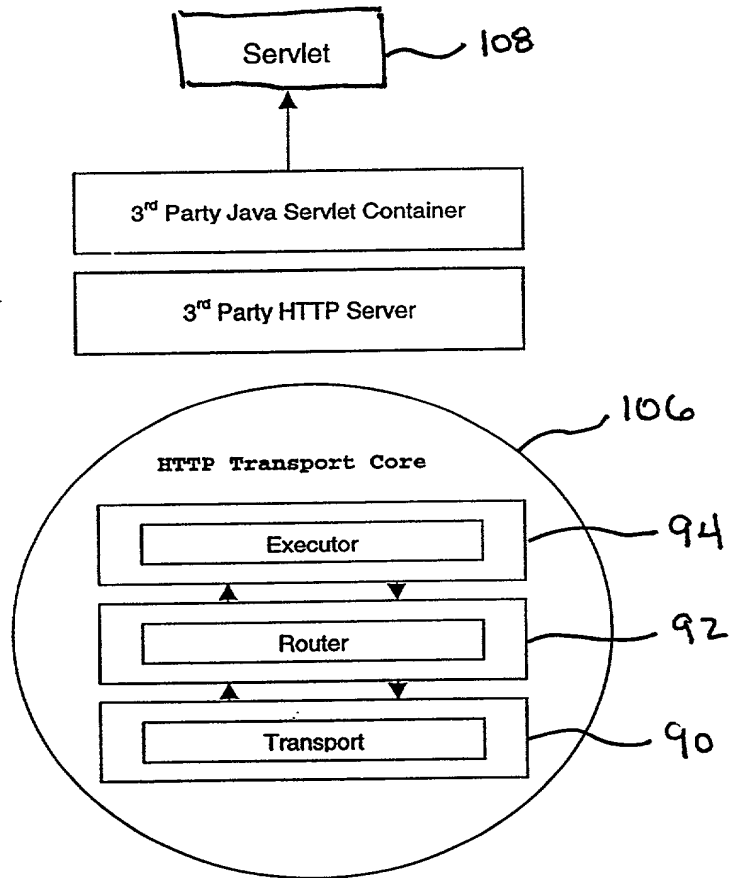


FIG. 9

FIG. 10 A

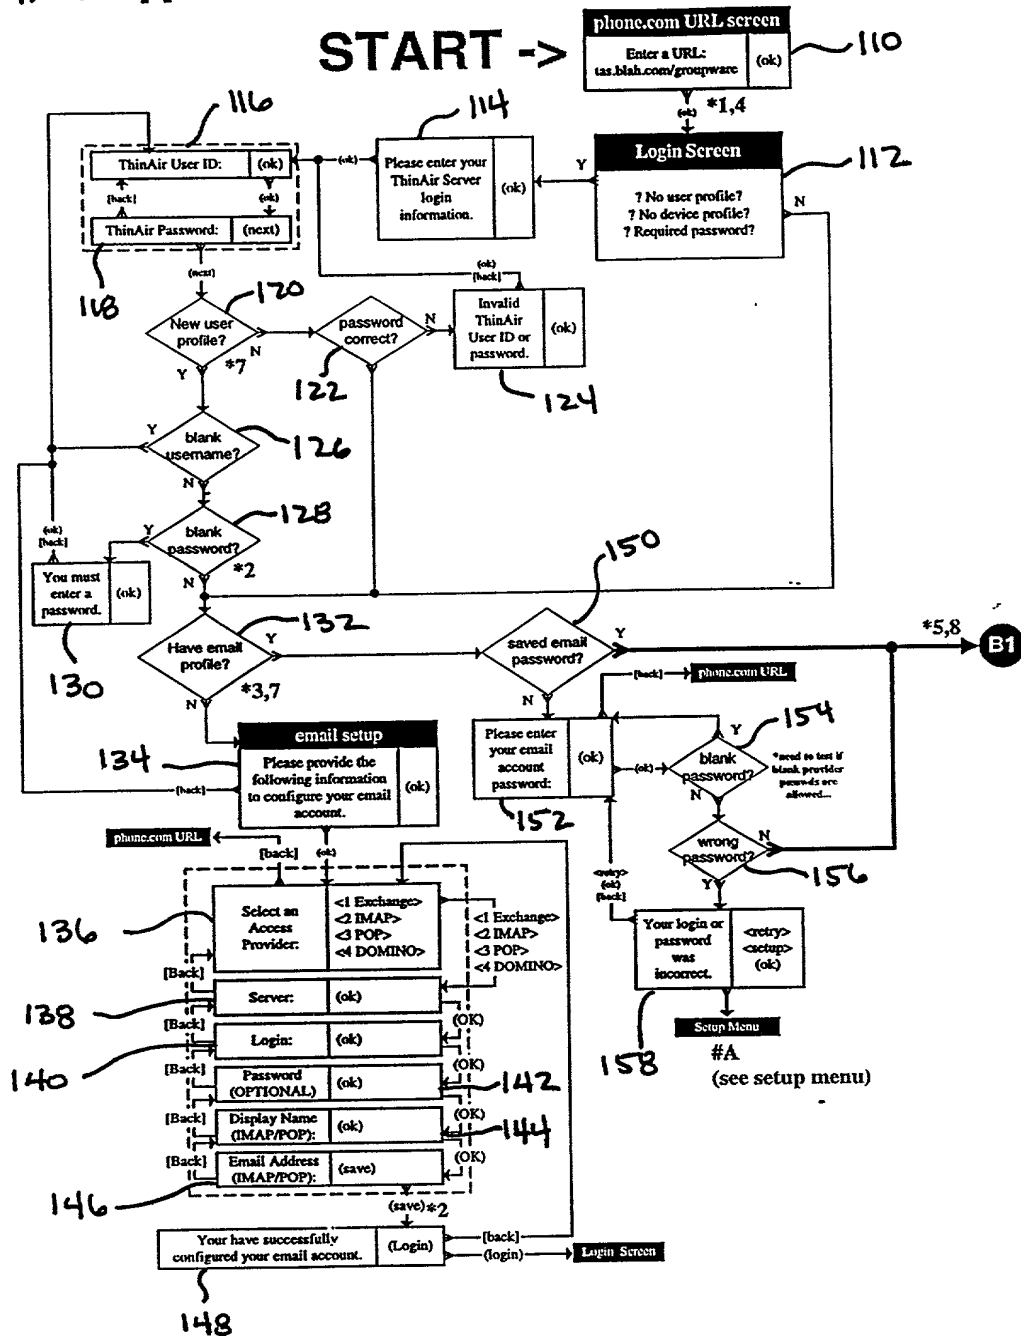


FIG. 10 B

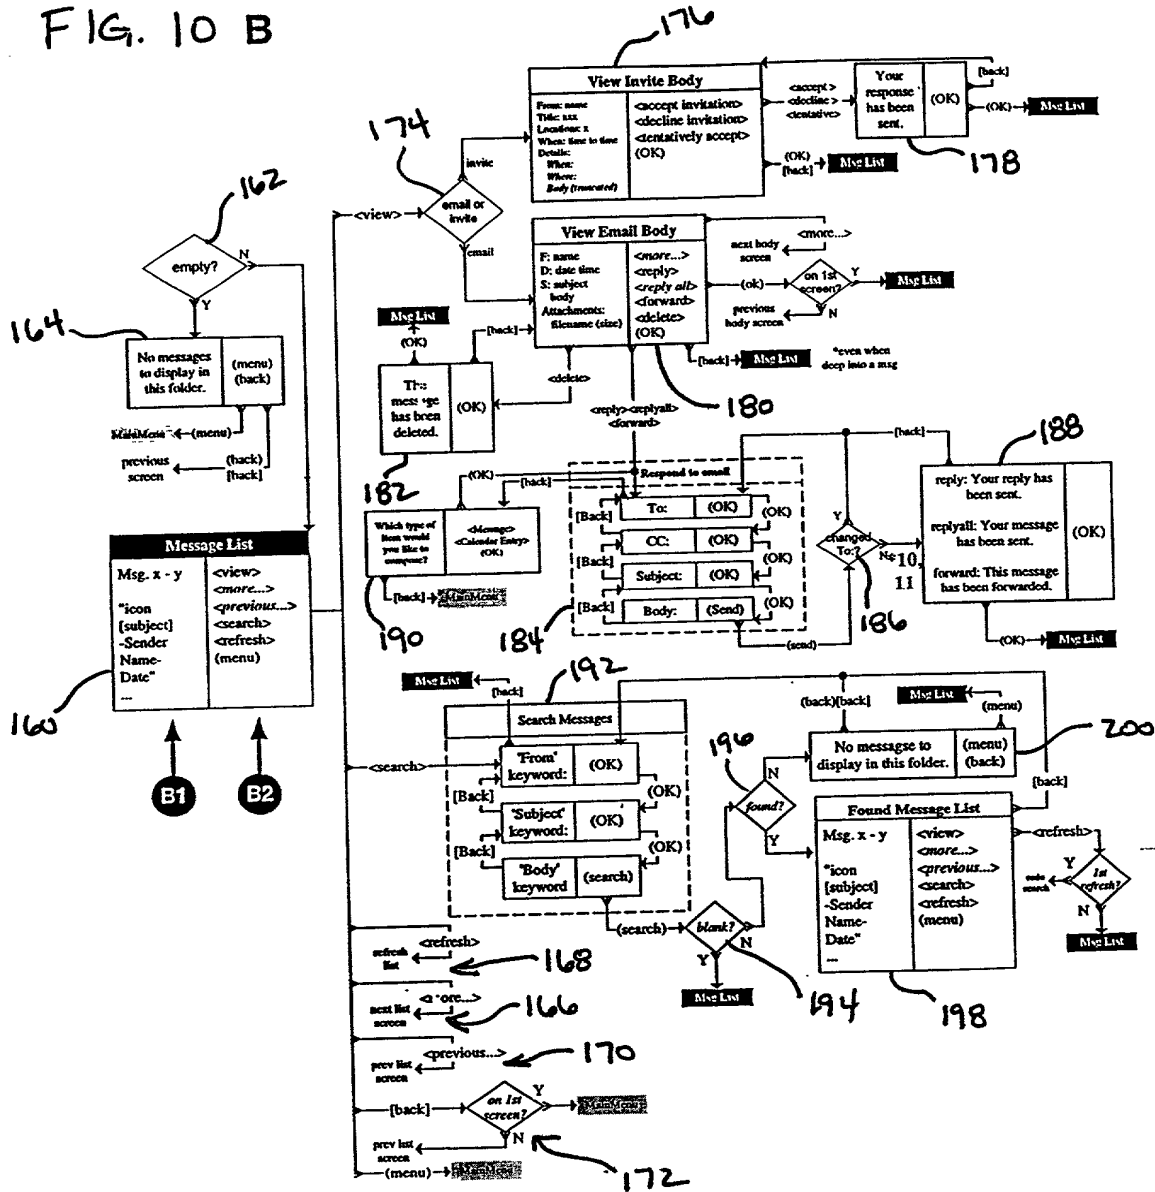
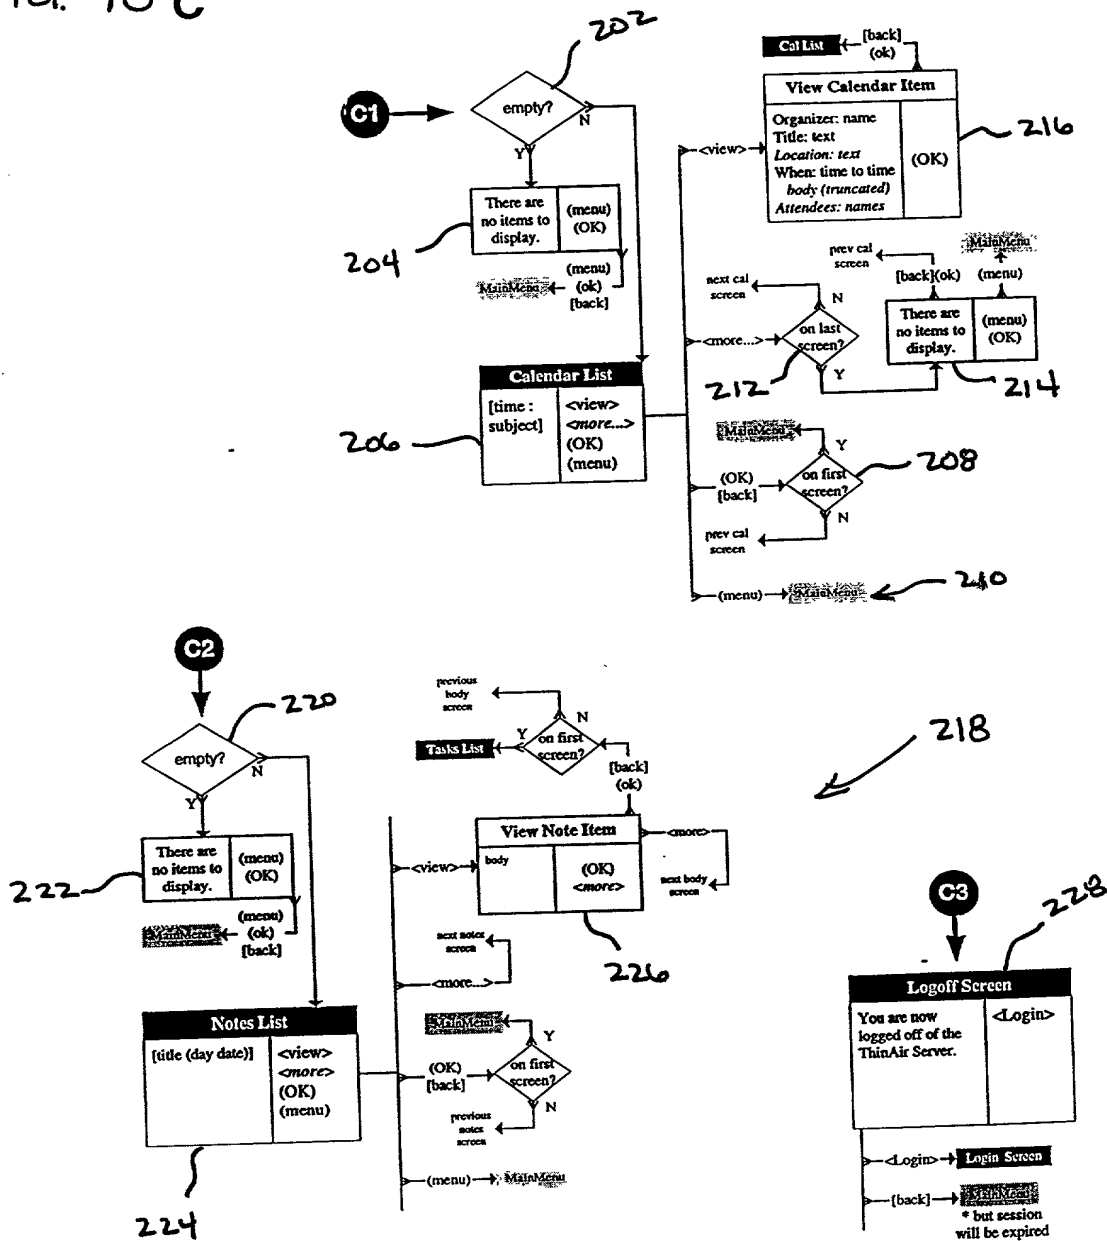


FIG. 10C



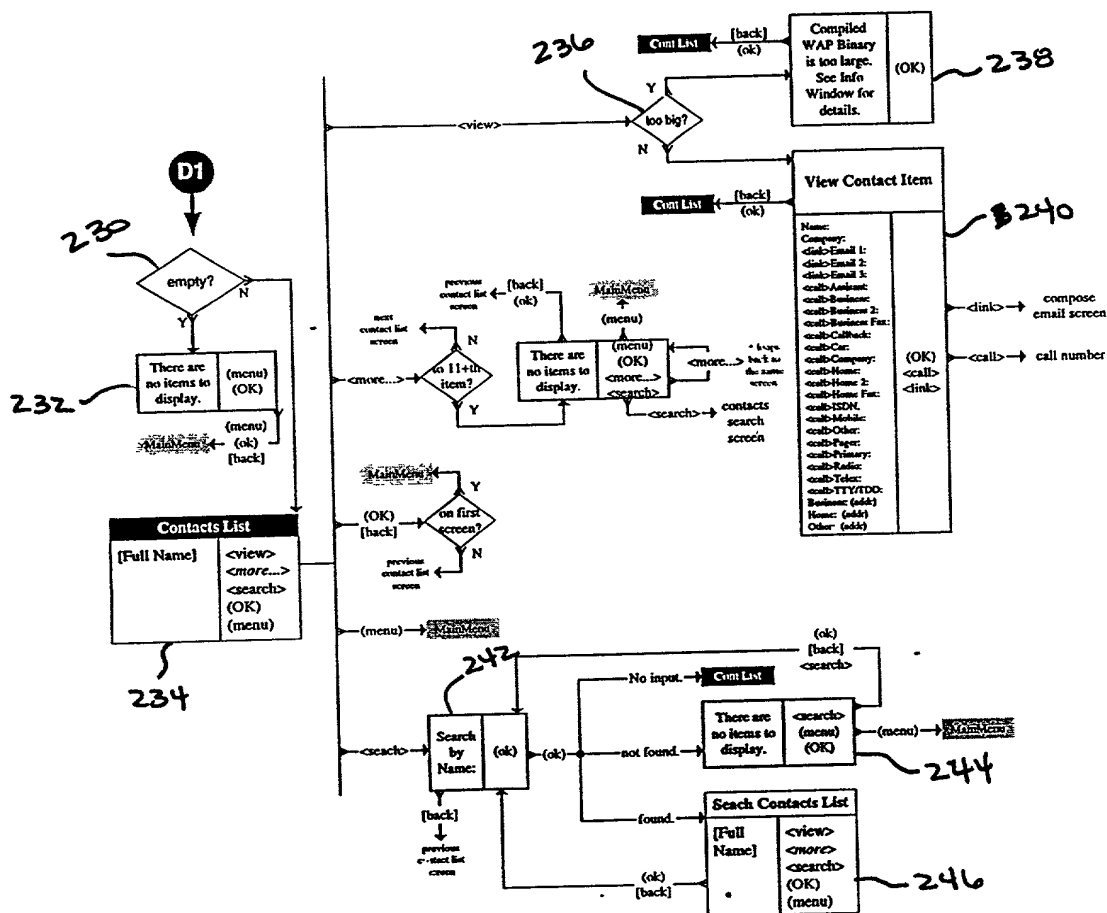
[illegible]

FIG. 10 E

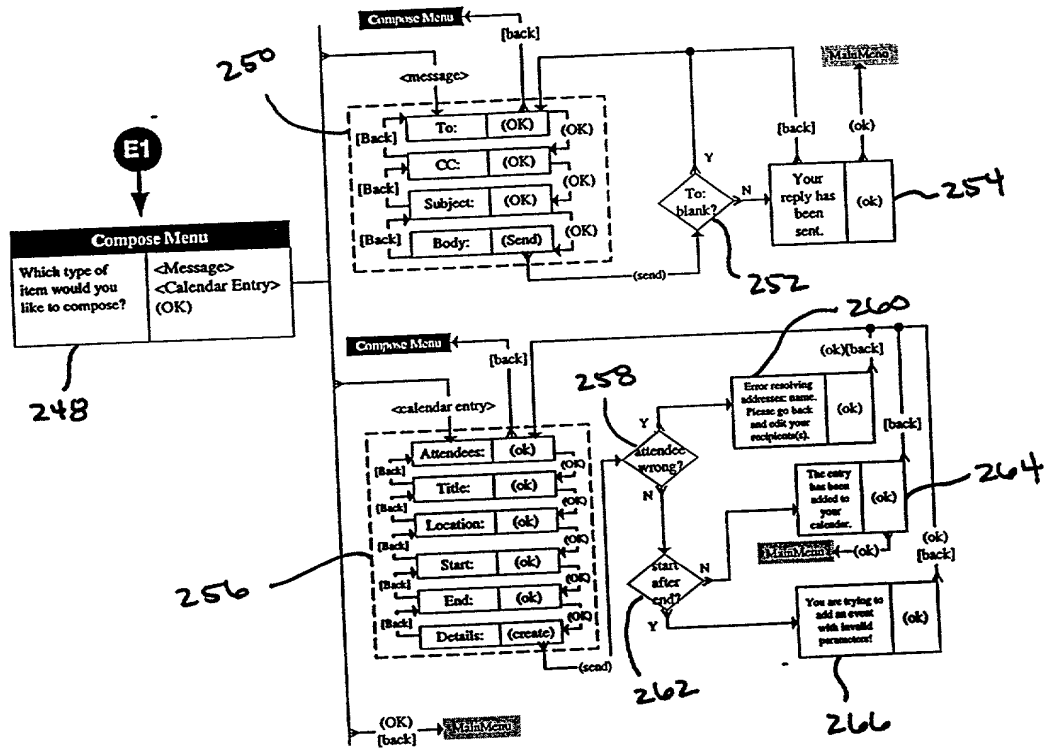


FIG. 10 F

<p>#### EXCEPTIONS for TASL16####</p>	
01. Network not available.	-> TAsServer down.
02. The ThinAir Server is being actively configured by an administrator. Please try accessing it again later.	-> User Manager in use and in active mode.
03. No email access providers are currently available. Consult your ThinAir administrator or try again later.	-> provider down.
04. HTTP Error: 404.	-> missing "groupware."
05. The ThinAir Provider could not be found. Please check your account settings.	-> provider down.
06. Your session has expired. Please login again.	-> Provider down after login. -> Inactivity after login.
07. You do not have the proper permissions.	-> can't create new users -> can't use users with no device profile.
08. ThinAir Server was unable to process your request.	-> setup -> provider goes down abnormally and user tries to login.
10. The server could not be found. Please check your account settings.	-> smtp host not found.
11. ThinAir Server could not connect to the specified host. Please check your settings and try again.	-> smtp service not running on host.

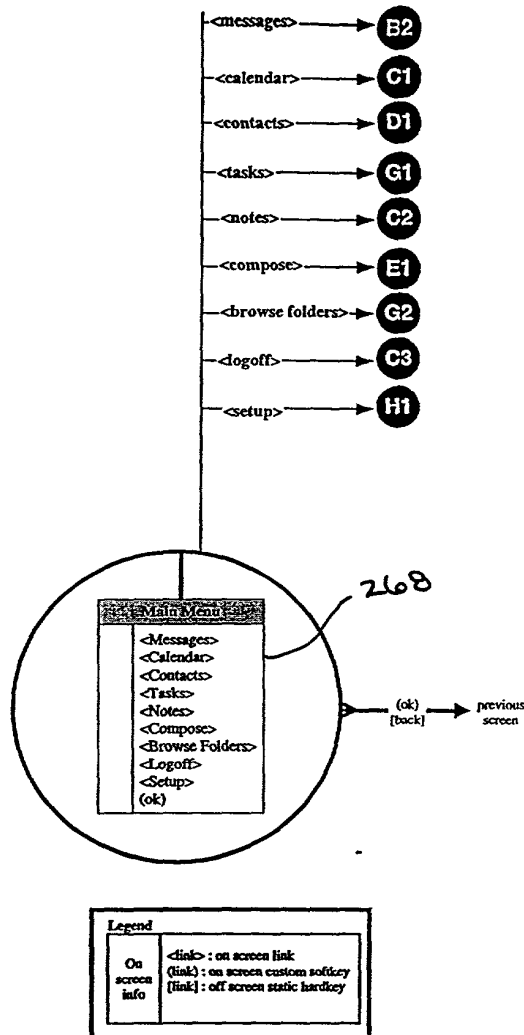


FIG. 10 G

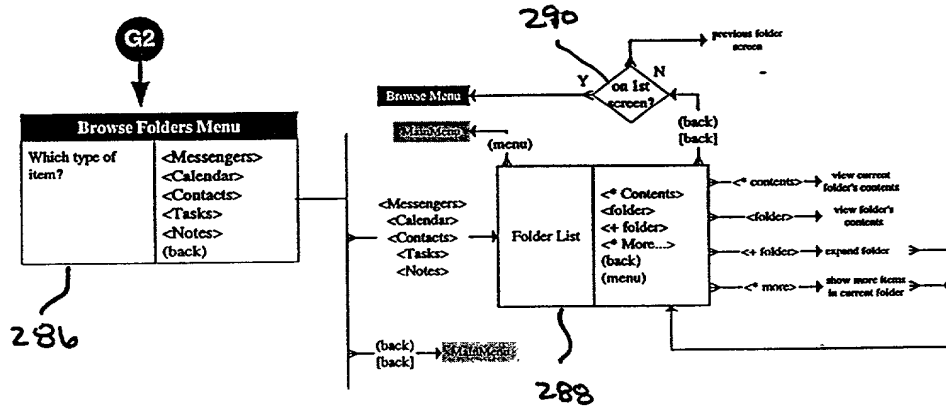
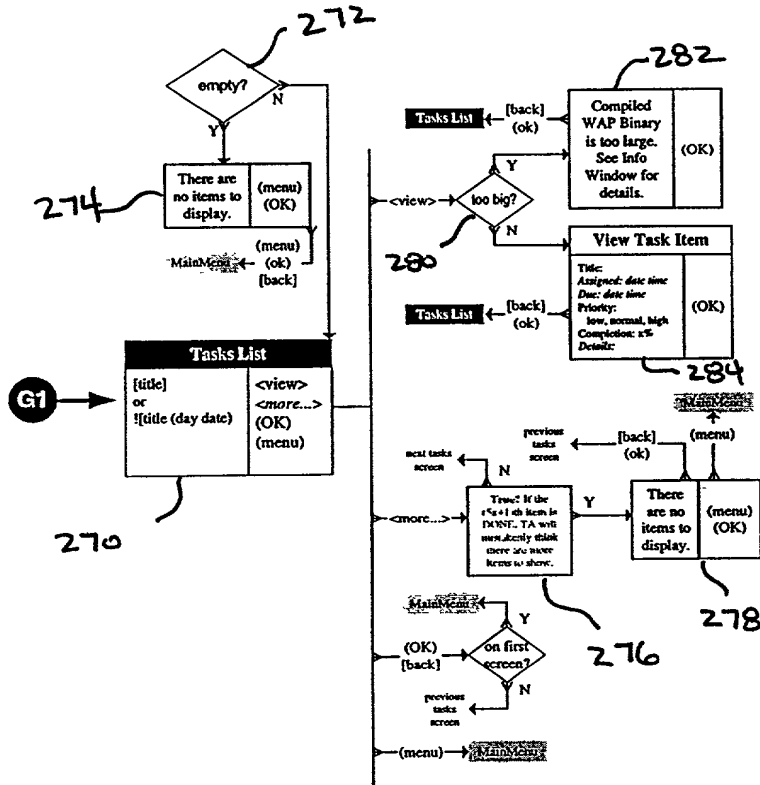


FIG. 10H

